

ADJUST-A-LINK™ GRADE 100 CHAIN SLINGS


The most versatile adjustable chain sling available.

Features and Benefits

- Alloy steel master control link for strength and reliability.
- Chain cannot be removed from the master control plate.
- Easily adjustable to accommodate a wide range of applications.
- Each assembly serialized for traceability.

- Complies with OSHA proof-tested and certified.
- High visibility yellow fittings are powder-coatd to prevent rust.
- Versatile one sling does many jobs.
- Compact plate design fits larger hooks for easier
- Less bulk than typical double adjustable chain slings.

Part Number		Chain Size	Rated	Latab				
			Single	Double		Latch Kit Part		
With Latch	Without Latch	(in.)	@ 90°	60°	45°	Number		
6 ft. Length								
30001LG10	30001G10	7/32	2,700	4,700	3,800	4404		
30003LG10	30003G10	9/32	4,300	7,400	6,000			
10 ft. Length								
30002LG10	30002G10	7/32	2,700	4,700	3,800	4404		
30004LG10	30004G10	9/32	4,300	7,400	6,000	4404		
30005LG10	30005G10	3/8	8,800	15,200	12,400	38LK		
30007L	30007	1/2+	12,000	20,800	16,300	12LK		
14 ft. Length								
30006LG10	30006G10	3/8	8,800	15,200	12,400	38LK		
30008L	30008	1/2+	12,000	20,800	16,300	12LK		

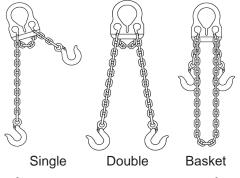




+ 1/2" size master link is flame cut, not forged: uses G80 capacity ratings.

Adjust-A-Link slings should not be used at angles of less than 45°.

Master Plate Dimensions (in.)						
Chain Size (in.)	Eye Width A	Eye Height B	Overall Width C	Overall Length D		
7/32	2.19	2.69	3.94	5.13		
9/32	2.88	3.19	5.06	6.50		
3/8	3.75	4.13	6.75	8.69		
1/2+	4.38	4.38	9.75	12.75		
+ 1/2" size master link is flame out, not forged: uses G80						

1/2" size master link is flame cut, not forged; uses G80 capacity ratings.

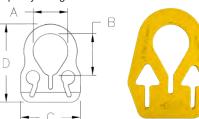




Flame Cut Master Link

Hook Dimensions (in.)								
Chain Size (in.)	Е	F	G	Н	J	K	L	
7/32	0.85	3.78	2.62	2.69	0.55	0.87	0.30	
9/32	1.01	4.41	3.01	3.19	0.64	1.03	0.37	
3/8	1.44	6.66	4.77	4.33	0.91	1.30	0.58	
1/2	1.78	8.16	5.69	5.50	1.13	1.66	0.75	

Chain must be seated at the base of adjusting slot of the master control link.

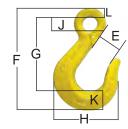

A WARNING Do not exceed rated capacities. Sling capacity decreases as the angle from horizontal decreases. Adjust-A-Link Slings should not be used at angles of less than 45°. Refer to the chain chart on this page and the Effect of Angle chart in the General Information section of this catalog.

Information General

Protection

Rigging Hardware